

Component code numbers
Codes d'appareils
Números de código de componentes

TV and VCR Téléviseurs et magnétoscopes Televisores y videograbadoras		
Brand Marque Marca	Component Appareil Componente	Code No. Code Núm. de código
Sony	VCR	1001 (VTR1: Beta) 1002 (VTR2: 8 mm) 1003 (VTR3: VHS) 1004, 1005, 1006 (VTR4, 5, 6: DV)
	TV	8001
	VCR	1030
Admiral	TV	8002, 8014, 8009
	VCR	1041, 1050, 1035
Aiwa	VCR	1052, 1053, 1054
	TV	8003
AOC	TV	8012
Audinac	TV	8034
Audio Dynamic	VCR	1017, 1040
	VCR	1033, 1046
Bell & Howell	VCR	8014, 8009, 8038
	TV	1020, 1022, 1017, 1066
Broksonic	VCR	8003, 8012, 8075
	TV	1012, 1011
Canon	VCR	1018, 1044, 1035, 1064
CCE	VCR	8063, 8072, 8011, 8041, 8073
Cineral	VCR	1044, 1064
	TV	8035, 8034
Citizen	VCR	1035
Craig	VCR	1018, 1035
	TV	8022, 8023, 8020, 8021
Croslex	TV	8011
Crown	TV	8023
Curtis Mathis	VCR	1007, 1041, 1012
	TV	8003, 8019, 8023
Daewoo	VCR	1044, 1015, 1012, 1064
	TV	8035, 8036, 8003, 8041, 8073
Daytron	TV	8013
DBX	VCR	1017, 1039, 1040
Dimensia	VCR	1007
Brand Marque Marca	Component Appareil Componente	Code No. Code Núm. de código
	Emerson	1044, 1022, 1023, 1019, 1020, 1021, 1041, 1058
	TV	8022, 8013, 8020, 8021, 8023, 8003, 8015, 8042
Fisher	VCR	1033, 1037, 1038, 1036
	TV	8025
Funai	VCR	1041
General Electric	VCR	1032, 1007, 1012, 1062
	TV	8002, 8018, 8003, 8007, 8045
Goldstar/LG	VCR	1035
	TV	8003, 8013, 8012, 8030, 8046, 8050, 8051, 8049
GO VIDEO	VCR	1051, 1042, 1043
	VCR	1061, 1047, 1041
Gradiente	VCR	1011, 1007, 1008
	TV	8031, 8013, 8003, 8032
HQ	VCR	1015
	VCR	1012, 1011
JC Penny	VCR	1012, 1008, 1007, 1033, 1017, 1039, 1040
	TV	8003, 8002, 8030, 8007
JVC	VCR	1017, 1047, 1048, 1049, 1039, 1040
	TV	8028, 8029
Kenwood	VCR	1017, 1039, 1035, 1040
	TV	8033, 8013, 8003, 8023, 8034
KTV	VCR	1041, 1035, 1008, 1036, 1037, 1033, 1038, 1052
	TV	8002, 8003, 8011, 8025, 8019, 8012, 8052
LXI (Sears)	VCR	1013, 1011, 1012, 1010, 1063
	TV	8011, 8012, 8013, 8003, 8043, 8047
Magnavox	VCR	1017, 1039, 1040
	TV	8024
Marantz	VCR	1035
	VCR	1012, 1038
Marta	VCR	1008, 1007
Memorex	VCR	
Minolta	VCR	

Brand Marque Marca	Component Appareil Componente	Code No. Code Núm. de código
Mitsubishi/MGA	VCR	1026, 1027, 1028, 1029, 1056, 1057, 1065, 1059
	TV	8024, 8003, 8012, 8066
	VCR	1028, 1041, 1024
Multitech	VCR	1017, 1039, 1040
NEC	VCR	1017, 1039, 1040
	TV	8003, 8012
Noblex	TV	8057, 8061, 8062
Nokia	VCR	1044, 1064
Olympic	VCR	1012, 1011
Optimus	VCR	1027
Orion	VCR	1055
Panasonic	VCR	1009, 1010, 1011, 1012, 1060, 1068
	TV	8018, 8016, 8017, 8007, 8049, 8067, 8077, 8079
Pentax	VCR	1008, 1007
	VCR	1011, 1012, 1064, 1044, 1020
Philco	VCR	8011, 8013, 8003, 8068, 8035, 8031
	TV	1033, 1017, 1039, 1040
Philips	VCR	1035, 1013, 1011, 1012, 1063
	TV	8011, 8056, 8043
Pioneer	VCR	1011
	TV	8037, 8018, 8019
Portland	TV	8003, 8008
Proton	TV	8071
Quasar	VCR	1011, 1012, 1009, 1010, 1006
	TV	8018, 8007, 8048
Radio Shack	TV	8002, 8012, 8024, 8023
	VCR	1007, 1008, 1011, 1012, 1013, 1014, 1015, 1016, 1063
RCA/PROSCAN	VCR	8002, 8003, 8004, 8005, 8006, 8007, 8008, 8044, 8045, 8046, 8053
	TV	1012, 1033, 1031, 1038, 1027, 1041
Realistic	VCR	1017
Sansui	VCR	1020
Singer	VCR	1022
Samsung	VCR	1025, 1016, 1024
	TV	8026, 8012, 8013, 8003, 8055
Sanyo	VCR	1033, 1038, 1064, 1046, 1044, 1035
	TV	8025, 8054, 8069, 8023
Scott	VCR	1015, 1016, 1024, 1038, 1026, 1027, 1028, 1029
	TV	8023, 8012
SEMP Toshiba	VCR	1025
	TV	8019
Serie Dorada	TV	8058
Sharp	VCR	1030, 1031
	TV	8014, 8013, 8015, 8070

Brand Marque Marca	Component Appareil Componente	Code No. Code Núm. de código
Shintom	VCR	1018
Signature 2000	VCR	1041, 1030
	TV	8014, 8009
Sylvania	VCR	1013, 1011, 1012, 1041, 1063, 1067
	TV	8011, 8012, 8003, 8076
Symphonic	VCR	1041
	TV	8023, 8039, 8040, 8074
Tashiro	VCR	1017, 1039, 1040
Tatung	VCR	1017, 1039, 1040
Teac	VCR	1017, 1039, 1041, 1040
Technics	VCR	1012, 1011
Toshiba	VCR	1015, 1014, 1052, 1069
	TV	8019, 8014, 8059, 8060, 8078
Videch	TV	8031, 8003, 8012
Wards	VCR	1030, 1031, 1038, 1034, 1035
	TV	8013, 8003, 8015, 8012
Yamaha	VCR	1033, 1017, 1039, 1040
Zenith	VCR	1034
	TV	8009, 8010

TV/VCR Combo
Combi téléviseur/magnétoscope
Combinación de TV/VCR

Brand Marque Marca	Code No. for each section Code pour chaque section Núm. de código para cada sección	
	TV	VCR
Sony	8001	1003
	Daewoo	8036
	Emerson	8021
General Electric	8020	1023
	8021	1022
	8020	1058
GoldStar/LG	8027	1024
	8027	1025
	8003, 8013, 8012, 8030, 8046, 8050, 8051, 8049	1035
Gradiente	8046	1035
	Magnavox	8011, 8018, 8047
	Panasonic	8018
Quasar	8018	1011
	8018	1012
	8018, 8048	1012, 1009, 1010
RCA/PROSCAN	8018	1011
Samsung	8023, 8027	1024, 1025, 1029
Symphonic	8023	1041

Analog Cable Box
Décodeur analogique de câblodistribution
Decodificador analógico

Brand/Marque/Marca	Code No./Code/Núm. de código
Hamlin/Regal	9022, 9023, 9024, 9025, 9026
Jerrold/G.I.	9044, 9001, 9002, 9003, 9004, 9005, 9006, 9007, 9008, 9018, 9043
NET	9042
Oak	9027, 9028, 9029
Panasonic	9019, 9020, 9021
Pioneer	9014, 9015
Scientific Atlanta	9009, 9010, 9011
Tocom	9016, 9017, 9043
Zenith	9012, 9013

Digital Cable Box
Décodeur de télévision numérique
Decodificador digital

Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	3101
Jerrold/G.I.	3103
Motorola	3103
Panasonic	3203
Philips	3104
Scientific Atlanta	3102

Mini Hi-Fi component system
Appareils d'une minichaîne Hi-Fi
Minisistemas de componentes de alta fidelidad

Brand Marque Marca	Code No. for each section Code pour chaque section Núm. de código para cada sección			
	Receiver/ amplituner/ Receptores	CD/lecteur CD / Reproductores de discos compactos	Tape/ cassette/ Decks de cassettes	MD/lecteur MD/Deck de minidisques
Sony	4001	5001	6001	7001
	4001	5001	6002	–
	4002	5001	6001	7001
	4002	5001	6002	–
	4003	5002	6002	–
	4003	5002	6003	–
	4003	5002	6004	–
	4003	5002	6005	–
	Admiral	4095	5085	–
	Aiwa	4022	5021	–
Akai	4023	5022	6025	–
	4023	5022	6026	–
	4040	5037	6042	–
	4079	5074	6072	7012
	4074	5068	6068	–
	B&O	4068	5063	6059
	(Bang&Olufsen)	4062	5059	–
	Crown	4062	5035	6039
	Daewoo	4005	5003	–
	Denon	4010	5008	6009
B&O	4028	5099	6028	–
	4028	5009	6029	–
	4028	5009	6010	–
	4024	5023	6027	–
	4037	5009	6028	7003
	Garrard	4058	5054	–
	Harman/ Kardon	4035	5090	–
	Jensen	4061	5084	6033
	JVC	4019	5018	6022
		4019	5018	6023
Pioneer	4020	5019	6024	–
	4070	5018	6060	–
	4070	5018	6061	–
	4019	5018	6060	7005
	4019	5018	6061	–
	4078	5073	6071	7008
RCA	4091	5080	6082	–
	4091	5080	6083	–
	SABA	4041	5042	–
	Samsung	4042	5043	–
	Sansui	4087	5083	6077
	Sanyo	4011	5010	6011
	Schneider	4069	5064	6062
				–
				–
				–

Brand Marque Marca	Code No. for each section Code pour chaque section Núm. de código para cada sección			
	Receiver/ amplituner/ Receptores	CD/lecteur CD / Reproductores de discos compactos	Tape/ cassette/ Decks de cassettes	MD/lecteur MD/Deck de minidisques
Kenwood	4015	5014	6015	–
	4016	5015	6017	–
	4016	5015	6018	–
	4025	5034	6036	–
	4025	5024	–	–
	4071	5065	6064	7014
	4071	5065	6065	–
	4071	5065	6015	7014
	4071	5065	6016	–
	4082	5077	6074	7011
GoldStar/LG	4083	5078	6075	7014
	4009	5007	6008	–
	4017	5016	6019	–
	4029	5039	6019	–
	4094	5016	6050	–
	McIntosh	4097	5090	–
	Onkyo	4034	5035	6038
		4034	5035	6039
		4034	5030	6038
		4034	5030	6039
Panasonic	4084	5079	6076	7015
	4008	5006	–	–
	4008	5005	6067	–
	4077	5072	6070	7010
	4099	5094	–	–
	Philips	4017	5016	6019
	Pioneer	4006	5004	6006
		4090	5028	6034
		4018	5017	6020
		4018	5017	6021
Sanyo	4006	5017	6006	–
	4018	5017	6006	–
	4072	5066	6066	–
	4081	5076	6073	7016
	4091	5080	6082	–
	4091	5080	6083	–
	SABA	4041	5042	–
	Samsung	4042	5043	–
	Sansui	4087	5083	6077
	Sanyo	4011	5010	6011
Schneider	4069	5064	6062	–
				–
				–
				–
				–
				–
				–
				–
				–
				–

Brand Marque Marca	Code No. for each section Code pour chaque section Núm. de código para cada sección			
--------------------------	---	--	--	--

Separate Components
Appareils indépendants
Componentes separados

Receiver/Amplifier Amplis-tuner/amplificaterus Receptores/amplificadores		CD Player Lecteurs CD Reproductores de discos compactos	
Brand/Marque/Marca	Code No./Code/Núm. de código	Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	4001, 4002	Sony	5001, 5002, 5099, 5100, 5101
Admiral	4095	Admial	5085
Aiwa	4022, 4023, 4040, 4079	Aiwa	5021, 5022, 5037, 5074
Akai	4074	Akai	5068
B&O (Bang&Olufsen)	4068	B&O (Bang&Olufsen)	5063
Crown	4062	Crown	5059
Daewoo	4005	Daewoo	5003
Denon	4010, 4024, 4027, 4028, 4036, 4037	Denon	5008, 5009, 5023, 5026
Finearts	4044	Emerson	5091
Goldstar/LG	4009	Fisher	5040
Harman/Kardon	4035	Goldstar/LG	5098, 5007
JVC	4019, 4020, 4047, 4070, 4078, 4098	Harman/Kardon	5031
Kenwood	4015, 4016, 4025, 4071, 4082, 4083	Hitachi	5041
Magnavox	4021	Jensen	5084
Marantz	4029, 4094, 4044	JVC	5018, 5019, 5033, 5073
McIntosh	4097	Kenwood	5014, 5015, 5024, 5034, 5065, 5077, 5078
NAD	4103, 4033	Magnavox	5016, 5026
Nakamichi	4104, 4087, 4086	Marantz	5071
Onkyo	4034, 4039, 4043, 4084	McIntosh	5090
Panasonic	4008, 4077, 4099	NAD	5029
Parasund	4066	Nakamichi	5044, 5082
Philips	4017	Onkyo	5030, 5035, 5038, 5079
Pioneer	4006, 4018, 4032, 4072, 4081, 4085, 4090	Optimus	5092
RCA	4105, 4091, 4092, 4093	Panasonic	5006, 5072, 5094
Rebox	4050	Philips	5016
Rotel	4067	Pioneer	5004, 5017, 5028, 5066, 5076
SABA	4041	RCA	5080, 5081, 5088, 5089
Samsung	4042	SABA	5042
Sansui	4086, 4087, 4089, 4038	Samsung	5043
Sanyo	4011	Sansui	5082, 5083, 5086
Sharp	4028, 4037, 4080, 4100	Sanyo	5010
Sherwood	4012, 4013, 4031	Sharp	5075, 5095
Schneider	4004, 4069	Sherwood	5011, 5012, 5039
Sounde-sign	4096	Schneider	5064
T+A	4063	Sounde-sign	5087
Teac	4088	T+A	5060
Technics	4007, 4026, 4045, 4073	Technics	5005, 5025, 5032, 5067
Toshiba	4101	Toshiba	5096, 5097
Yamaha	4102, 4014, 4030, 4046	Yamaha	5013, 5027, 5036

Cassette Deck Platines à cassette Decks de cassettes	
Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	6001, 6002, 6005
Aiwa	6042, 6045, 6025
Denon	6028, 6029, 6009, 6010
Fisher	6011
GoldStar/LG	6008
Harman/Kardon	6033
JVC	6022, 6023, 6024
Kenwood	6036, 6037, 6015, 6016
Marantz	6047
NAD	6031, 6032
Nakamichi	6079
Onkyo	6038, 6039, 6040, 6041, 6043, 6044
Panasonic	6067
Philips	6047
Pioneer	6034, 6035, 6020, 6021, 6006
RCA	6084, 6085
Sansui	6079, 6077, 6078
Sanyo	6011
Sharp	6028
Teac	6077, 6078, 6080, 6081
Technics	6046, 6007, 6067
Yamaha	6030, 6014

DVD DVD Videodiscos digitales	
Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	0001, 0024, 0023, 0025, 0201, 0202, 0203, 0211
Aiwa	0015
Denon	0006, 0017
Harman/Kardon	0018
Hitachi	0008
JVC	0007, 0208
KLH	0010
Onkyo	0016
Panasonic	0002, 0006, 0027, 0028, 0205, 0206, 0207, 0213, 0216
Philips	0012, 0221
Pioneer	0004, 0019, 0021, 0204, 0222, 0223
RCA	0005
Sharp	0011, 0219
Shinco	0022
Samsung	0014, 0212
Sylvania	0020, 0215, 0220
Thomson	0013
Toshiba	0003, 0209, 0210, 0217, 0224
Yamaha	0006
Zenith	0009, 0218
Daewoo	0029
LG	0009, 0218
Marantz	0012
Funai	0020, 0220
Teac	0022
Mitsubishi	0026
Broksonic	0214

MD Deck/DAT Deck Platines MD/DAT Decks de minidiscos/cinta audiodigital	
Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	7001, 7002, 7101 (DAT)
Aiwa	7012
Akai	7018
Denon	7003
JVC	7008
Kenwood	7004, 7011, 7014
Marantz	7007
Onkyo	7015, 7102 (DAT)
Panasonic	7006, 7010
Pioneer	7016, 7102 (DAT)
Sansui	7009
Sharp	7013
Teac	7005
Yamaha	7017

Digital Satellite Receiver Récepteur satellite Receptor de satélite digital	
DirecTV (for the U.S.A./pour les États-Unis/para EE.UU.)	
Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	3001, 3011, 3012
Hitachi	3005
Hughes	3004
Panasonic	3003
RCA/Proscan	3002, 3007
Toshiba	3006

Ster Choice (for Canada/pour le Canada/para Canadá)	
Brand/Marque/Marca	Code No./Code/Núm. de código
General Instrument	3009*

* as of 1998/en 1998/en 1998

Express Vu (for Canada/pour le Canada/para Canadá)	
Brand/Marque/Marca	Code No./Code/Núm. de código
Echo Star	3010*

* as of 1998/en 1998/en 1998

LD (Laser Disc) LD (Disque laser) LD (Disco láser)	
Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	0101, 0102, 0103, 0104
Hitachi	0108
Kenwood	0113, 0114
Magnavox	0110
Panasonic	0105, 0106, 0107
Philips	0115
Pioneer	0109
Sanyo	0112
Sharp	0111, 0116

Light
Appareil d'éclairage
Luz

Brand Marque Marca	Product Produit Producto	Code No Code Núm. de código
Lutron	Grafik Eye	2001
	HomeWorks interactive	2004
	Radio RA	2002
	Spacer	2001
	Spacer System	2003
X10		2005

DVR (Digital Video Recorder) DVR (Magnétoscope numérique) DVR (Videograbadora digital)	
Tivo	
Brand/Marque/Marca	Code No./Code/Núm. de código
Sony	3201, 3205, 3206
Philips	3202
Replay	
Brand/Marque/Marca	Code No./Code/Núm. de código
Panasonic	3203
Replay	3204